ROCKWELL™ WINDOW WELLS

COVER INSTALLATION

Installation kit includes:	
2 Brackets	3 Velcro Tabs
4 Cement Anchors	3 Screws
2 Rubber Spacers	

Tools needed:	
Hammer Drill	Permanent Marker
1/8” Drill Bit	3/16” Masonry Bit
5/16” socket or wrench	

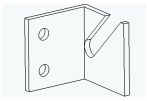

Left Side Bracket

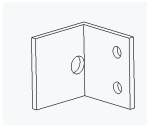

Right Side Bracket

Step 1: Place rubber spacers on top of window well 1 inch away from the house’s foundation. (Discard rubber spacers after installation is complete.)

Step 2: Center the window well cover on top of the rubber spacers.

Step 3: Place 2 brackets over the rods extending from the rear of the window well cover. Make sure the bracket is against the cover, straight, and level.

Note: Left bracket has a slot, and the right bracket has a hole.

Step 4: Mark both holes on the two brackets with a permanent marker.

Step 5: Drill all 4 holes with a 3/16” masonry bit and a hammer drill.

Step 6: Using a 5/16” socket wrench, attach 2 brackets to foundation with 4 provided masonry screws.

Step 7: Attach window well cover to brackets.

The window well cover mounts to the brackets by inserting the right rod into the large hole in the right bracket….

and sliding the left rod into the slot in the left bracket.

Step 8: Mark spots where the two side supports contact the window well.

Step 9: Drill two 1/8” holes.

Step 10: Secure 3 Velcro tabs with provided screws.

Step 11: Remove protective plastic sheet.